

RCA J32PT1140 USER MANUAL



Quick Links

[Master Menu Adjustments](#)

[Commercial Interface Menu](#)

[Troubleshooting](#)

Table of Contents

[Table of Contents](#)

[Important Safety Instructions](#)

[Important Safety Informations](#)

[Getting Started](#)

[Initial Setup Wizard](#)

[Initial TV Setup](#)

[Channel Menu](#)

[Master Menu Adjustments](#)

[Picture Menu](#)

[Sound Menu](#)

[Audio Languages](#)

[Digital Audio Output](#)

[Surround Sound](#)

[Setup Menu](#)

[Menu Language](#)

[Other Settings](#)

[Commercial Interface Menu](#)

[Channel Submenu](#)

[OSD Submenu](#)

[Source Submenu](#)

[Power Management Submenu](#)

[Channel Remapping](#)

[Photo Menu](#)

[USB Operation](#)

[Music Menu](#)


[Troubleshooting](#)

Attaching the TV Stand

Attaching the TV Stand to Furniture

Limited Warranty

Other ManualsLib Projects

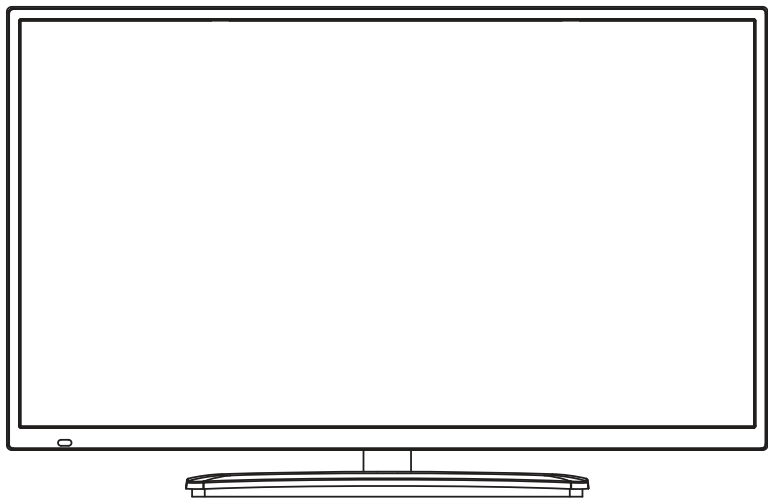

User Manual

J32PT1140

J40PT1240

J40PT1440

J43PT1440

J49PT1440

J55PT1440

Before operating this product, please read user manual completely

Table of Contents

Table of Contents.....	1
Important Safety Informations.....	2
Getting Started	4
Initial TV Setup	8
Master Menu Adjustments.....	9
Commercial Interface Menu.....	18
Channel Remapping	26
USB Operation	29
Troubleshooting.....	31
Attaching the TV Stand.....	32
Attaching the TV Stand to Furniture.....	33
Limited Warranty.....	34

Important Safety Instructions

CAUTION MARKINGS LOCATED AT THE REAR OF THE APPARATUS.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral Triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



CAUTION

DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED.
REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF
PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN
HAZARDOUS RADIATION EXPOSURE.



WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. DO NOT PLACE OBJECTS FILLED WITH LIQUIDS ON OR NEAR THIS UNIT.

SHOULD ANY TROUBLE OCCUR, DISCONNECT THE AC POWER CORD AND CONTACT A QUALIFIED TECHNICIAN.

A warning that an apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection.



WARNING

This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm.

Wash hands after handling.

For more information go to www.P65Warnings.ca.gov.


Important Safety Instructions

- 1) Read these instructions.
 - 2) Keep these instructions.
 - 3) Heed all warnings.
 - 4) Follow all instructions.
 - 5) Do not use this apparatus near water.
 - 6) Clean only with a dry cloth.
 - 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 - 8) Install in accordance with the manufacturer's instructions.
 - 9) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (Including amplifiers) that produce heat.
 - 10) Do not defeat the safety purpose of the polarized or grounding-type plug.
 - * A polarized plug has two blades with one wider than the other.
 - * A grounding type plug has two blades and a third grounding prong.
 - * The wide blade or the third prong is provided for your safety.
 - * If the provided plug does not fit into your wall outlet, consult an electrician for replacement of the obsolete outlet.
 - 11) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - 12) Only use attachments / accessories specified by the manufacturer.
 - 13) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
 - * When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
- 
- Figure 21.20 – Possible cart warning
- 14) Unplug this apparatus during lightning Storms or when unused for long periods of time.
 - 15) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - 16) To prevent electric shock, ensure the grounding pin on the AC cord power plug is securely connected.


Getting Started

View

J32PT1140

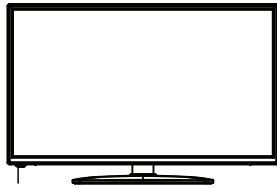


1, 2

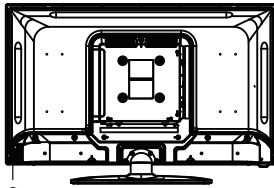

3

J40PT1240

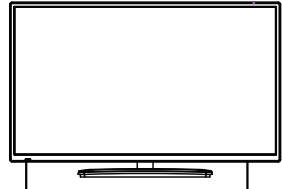


1, 2

3

J40PT1440/J43PT1440/J49PT1440



1, 2

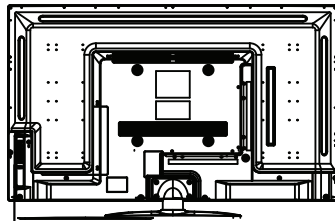


3

J55PT1440



1, 2

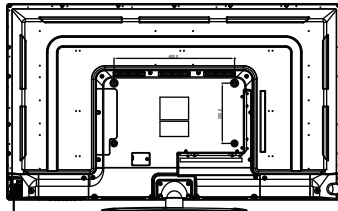

3

1. Remote Sensor

Do not block this sensor or the remote control will not work.

2. Standby Indicator

Indicates whether the unit is ON or in STANDBY (OFF) mode.

3. The functions of the buttons are described as follows:

VOL+/-: Press to adjust the volume.

CH+/-: Press to scan through channels.

MENU: Press to display the OSD menu, Press again to exit the menu.

SOURCE: Press to select the input source of the TV.

STANDBY: Press to turn the unit on or off.

Getting Started

View

MTI IN		RS232	IR Pass Through	COAX	HDMI1	
HDMI2 (ARC)	HDMI3	YPbPr (Mini)	AV (Mini)	RF	Line Out	USB2 USB1

1. MTI

Internet Connection.

2. RS232

Allows television to be controlled by an external device.

3. IR Pass Through.

4. Coaxial Output

Connection for Coaxial (digital audio) output

5. HDMI Input

Connection for HDMI signal.

6. MINI YPbPr Input

Connection for component signal input in YPbPr mode.

7. MINI AV Input

Connection for composite signal input in AV mode.

8. RF Input

Connection for external antenna (must be connected to receive channels.)

9. Line Output


10.USB Port

Connection for USB device.

Getting Started

The Guest Remote Control - R230D1A

This remote is used by the hotel guest. It prevents the guest from changing configuration settings. To change the settings of the TV, refer to the Master Remote.

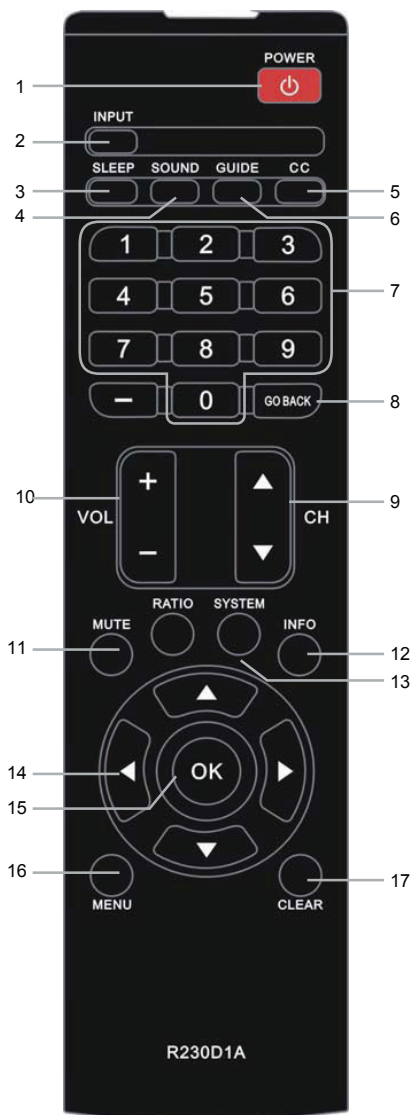

1. POWER

Switches the set on or off.

2. INPUT

Selects the input source.

3. SLEEP

Sets the sleep timer.

4. SOUND

Changes equalizer sound settings.

5. CC

Modifies Closed Caption settings.

6. GUIDE

Displays a channel list menu.

7. NUMBER BUTTONS

Selects channel numbers.

8. GO BACK

Return to the previous channel.

9. CH+/CH-

Changes the channel.

10. VOL+/VOL-

Adjusts sound level.

11. MUTE

Switches the sound on or off.

12. INFO

Displays the current channel info.

13. SYSTEM

Configures remote to TV1/2/3 when multiple TVs are in the same room.

14. Navigational Controls

Adjusts or selects menu settings.

15. OK

Accepts your selection.

16. MENU

Displays the Guest Menu.


17. CLEAR

Exits from any OSD.

Getting Started

The Master Remote Control - R230D2

This remote is used by the installer. It allows access to the configuration settings of the TV. This remote should not be used by the guest.

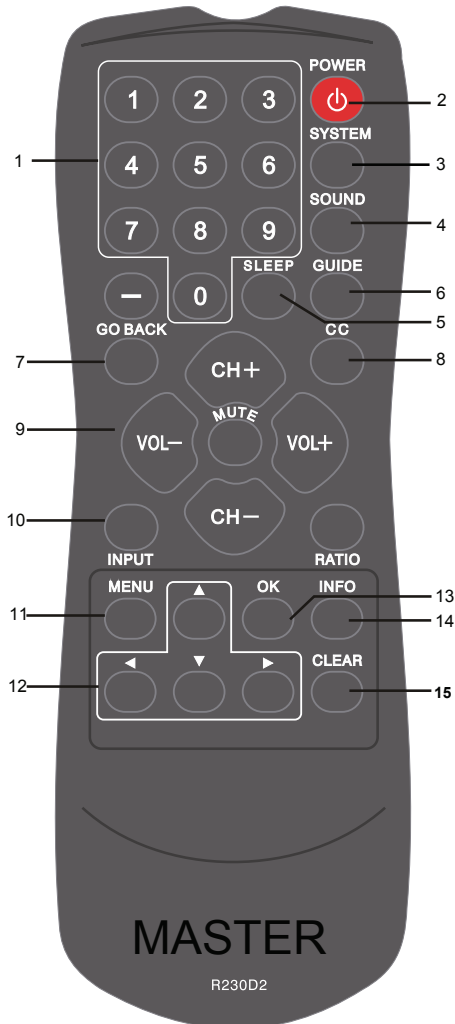

1. NUMBER BUTTONS

Selects channel numbers.

2. POWER

Switches the set on or off.

3. SYSTEM

Configures remote to TV1/2/3 when multiple TVs are in the same room.

4. SOUND

Changes equalizer sound settings.

5. SLEEP

Sets the sleep timer.

6. GUIDE

Displays a channel list menu.

7. GO BACK

Return to the previous channel.

8. CC

Modifies Closed Caption settings.

9. VOL+/VOL-

Adjusts sound level.

CH+/CH-

Changes the channel.

MUTE

Switches the sound on or off.

10. INPUT

Selects the input source.

11. MENU

Displays the Master Setup Menu.

12. Navigational Controls

Adjusts or selects menu settings.

13. OK

Accepts your selection.

14. INFO

Displays the current channel info.

15. CLEAR

Exits from any OSD.

Initial TV Setup

Initial Setup Wizard

After connecting your TV antenna or cable wire, turn the television ON. The quick setup wizard will display on-screen. Select your preferred Picture setting followed by antenna options if you will view local over-the-air TV broadcasts from an antenna. These channels will be stored in the TV tuner memory after performing Channel Auto Scan.

Select Language

Press ◀/▶ button to select the language to be used for menus and message.

Press ▼/▲ button to select go to next step and press OK/▶ button to go.




Select Time

Press ▼/▲ button to select the time zone, daylight saving time and time format you want.

Press ◀/▶ button on the remote control to adjust.


Press ▼/▲ button on the remote control to select go to next step and press OK/▶ button to go.

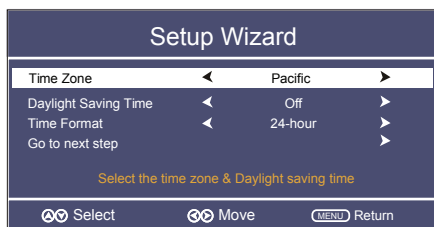


Auto Scan

Press ◀/▶ button to select the antenna type.

Press ▼/▲ button to select go to next step.

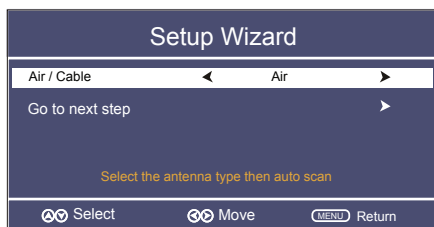

Press OK/▶ button to start auto scan. Channels found will be stored into the TV tuner memory.

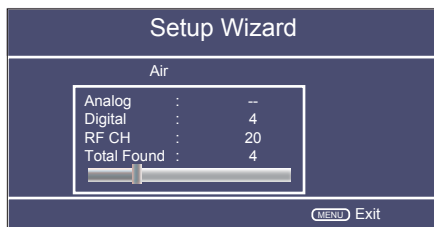

Master Menu Adjustments

You must use a Master Remote (R230D2) to access the master menu.

Channel Menu

Press MENU button to display the main menu, press ◀/▶ button to select channels.

Press ▼/▲ button to select submenu.

Press ◀ / ▶ button to adjust options.

Press MENU button to back the previous menu.



Air/Cable

Select signal type.

Press ◀ / ▶ button to select(Air/Cable).

Auto Channel Scan

Automatically search for channels.

Press OK / ▶ button to enter.



Remap Channel

See Channel Remapping section (page 26).

Channel Remapping

See Channel Remapping on page 26.

Channel Number

Allows you to change channels using the directional arrows on your remote

Master Menu Adjustments


Picture Menu

Press MENU button to display the main menu, press ◀ / ▶ button to select Picture.

Press ▼ / ▲ button to select submenu.

Press ◀ / ▶ button to adjust options.

Press MENU button to back the previous menu.

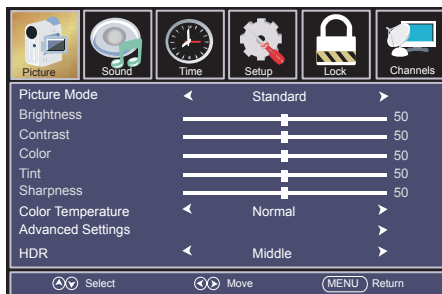

Picture Mode

Adjust picture mode to change picture appearance.

Press ◀ / ▶ button to select (Standard / Soft / User / Dynamic).

Note:The brightness, contrast, color, tint and sharpness are only available in User mode, you can adjust as you like.

Brightness

Adjust the visual perception output of the entire picture, it will effect the luminousness of the picture.

Press ◀ / ▶ button to adjust.

Contrast

Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

Press ◀ / ▶ button to adjust.

Color

Adjust the saturation of the color based on your own preference.

Press ◀ / ▶ button to adjust.

Tint

Adjust the hue (Red, Green, Blue) of the picture.

Press ◀ / ▶ button to adjust.

Sharpness

Adjust the peaking in the detail of the picture.

Press ◀ / ▶ button to adjust.

Master Menu Adjustments

Color Temperature

Adjust the color personality of the picture to your preference.

Normal - Gives the white colors a neutral tint.

Warm - Gives the white colors a reddish tint.

Cool - Gives the white colors a bluish tint.

Advanced Settings

Adjust advanced video features to fine tune the picture.

Press OK / ► button to enter.

HDR

Press ◀ / ► button to select.

Note: The HDR mode is only available in video with HDR format.

Master Menu Adjustments

Sound Menu

Press MENU button to display the main menu, press ◀ / ▶ button to select Sound.

Press ▼ / ▲ button to select submenu.

Press ◀ / ▶ button to adjust options.

Press MENU button to back the previous menu.



Sound Mode

Select a sound mode to achieve ideal sound.

Press ◀ / ▶ button to select (Standard / User / Movie / Sports / Music).

Note: The bass, treble and balance are only available in User mode, you can adjust as you like.

Bass

Increases or decreases lower-pitched sounds.

Press ◀ / ▶ button to adjust.

Treble

Increases or decreases high-pitched sounds.

Press ◀ / ▶ button to adjust.

Balance

Adjust the balance between left and right speakers to adapt to your listening position.

Press ◀ / ▶ button to adjust.

MTS

Adjust audio preference or an alternative language.

Press ◀ / ▶ button to adjust.

Audio Languages

Select the language supported by the chosen digital channel. Option is only available when TV is set as the input.

Press ◀ / ▶ button to select.

Master Menu Adjustments

Digital Audio Output

Select the digital audio output between PCM (Analog Audio) and RAW (Digital Audio).
Press ◀ / ▶ button to select.

Surround Sound

Turn virtual surround sound effect on or off.
Press ◀ / ▶ button to select (On / Off).

AVL

AVL maintains a consistent sound level set by the viewer regardless of the channel or program.
Press ◀ / ▶ button to select (On / Off).

Time Menu

Press MENU button to display the main menu, press ◀ / ▶ button to select Time.
Press ▼ / ▲ button to select submenu.
Press ◀ / ▶ button to adjust options.
Press MENU button to back the previous menu.



Sleep Timer

Set a timer for the TV to turn off automatically.
Press ◀/▶ button to select (Off / 5min / 10min / 15min / 30min / 60min / 90min / 120min / 180min / 240min).

Time Zone

Select your time zone.
Press ◀/▶ button to select (Central / Mountain / Pacific / Alaska / Hawaii / Atlantic / Eastern).

Daylight Saving Time

Set the daylight saving time for your area.
Press ◀/▶ button to select (On / Off).

Master Menu Adjustments

Time Format

Select your time format.

Press ◀/▶ button to select (12-hour or 24-hour).

Auto Clock

Use to synchronize the display automatically.

Press ◀/▶ button to select (On / Off).

Setup Menu

Press MENU button to display the main menu, press ◀/▶ button to select Setup.

Press ▼/▲ button to select submenu.

Press ◀ / ▶ button to adjust options.

Press MENU button to back the previous menu.



Menu language

Select the language for the on screen display and menu. Default setting is English.

Press ◀ / ▶ button to select language.

OSD Timeout

Adjust the duration of the OSD (on screen display) menu.

Press ◀ / ▶ button to select.

Closed Caption

Adjust Closed Caption settings. Only available under TV and AV source.

Press ◀ / ▶ button to select.

Other Settings

Set the parameter of audio only, no signal power off and no operation power off.

Press OK / ▶ button to enter.

Master Menu Adjustments

Reset

Reset TV settings to factory defaults.
Press OK / ► button to enter.

HDMI CEC

Press OK / ► button to enter.

Voice Description

Press ◀ / ► button to select (on/off).

Bluetooth

Press OK / ► button to enter sub-menu.

Commercial Interface

Press OK / ► button to enter sub-menu.
See Page (18) for Details

Lock Menu

Press MENU button to display the main menu, press ◀/► button to select Parental.
Press ▼/▲ button to select submenu.
Press ◀ / ► button to adjust options.
Press MENU button to back the previous menu.



Enter your 4-digit password. Default password is 0000.



Master Menu Adjustments

Change Password

Enter a new 4-digit password then re-enter it to confirm.

Press ► button to enter.

System Lock

Lock or unlock the buttons on the TV.

Press ◀/▶ button to select (Off / On).

Input Block

Block or unblock the input sources.

Press ► button to enter.

Press ◀/▶ button to select (Unblock / Block).

US Rating

Restrict movie and TV programs by US Ratings.


Only available when "System Lock" is "on".

Press ► button to enter.

For the United States, the rating setting includes the following options: TV, MPAA.



The TV rating is composed of two aspects: age-based and content-based.

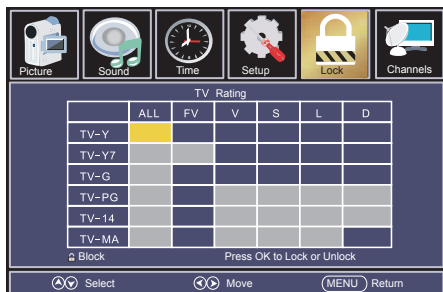

Master Menu Adjustments

Canada English

These ratings are for programs which are using English rating system.

Rating	Defined as
Off	News and sports.
C	Children
C8	Children over 8 years
G	General
PG	Parental guidance
14+	Over 14 years
18+	Adults

Canada French

The ratings are for programs which are using French rating system.

Rating	Defined as
Off	News and sports.
G	General
8 ans+	General – Not Suitable for Young Children)
13ans+	The program may be viewed, purchased or rented only by persons 13 years of age or older.
16 ans+	The program may be viewed, purchased or rented only by persons 16 years of age or older.
18 ans+	The program may be viewed, purchased or rented only by persons 18 years of age or older.

Commercial Interface Menu


Commercial Interface Menu

Press MENU button to display the main menu, press ◀/▶ button to select Setup.

Press ▼/▲ button to select submenu.

Press ◀ / ▶ button to adjust options.

Press MENU button to back the previous menu.

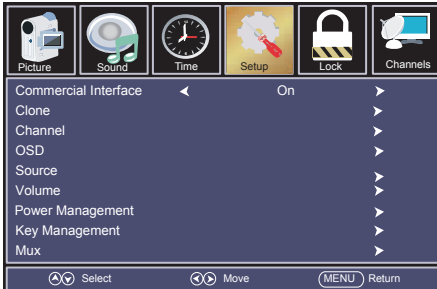

Clone Submenu



Import Setting

This feature allows you to load a clone created from an already configured television. You will need a USB memory stick with a previously created Clone file already loaded. Plug the USB drive into a USB port on the television and select this feature to load the clone file into the television.

Export Setting

This feature allows you to save all your files as a 'Clone'. You will need an empty USB memory stick. Plug the USB memory stick into a free USB port on the television. Select this setting to save all the settings from the television on to the USB stick as a 'clone' file.

Update Splash Screen

This feature replaces the RCA image when the TV powers on with an image of your choice. You will need a USB memory stick with a file called logo.jpg that is smaller than 200 KB in size and formatted to fit the resolution of the television in question. We suggest 1366 x 768 or 1920 x 1080 for all televisions.

Commercial Interface Menu

Install Settings File

Sometimes the RCA support team can provide a setup file called settings.set. This file would need to be placed on a USB memory stick. The USB memory stick can be plugged into any available USB port on the television. Selecting this option will install the file.

Dump Channels

This setting takes a channel scan and exports the important tuning information to a USB storage disk. A USB storage disk will need to be plugged into any USB port on the TV for this function to work. This is used when creating a settings.set file for MUX deployment, or for your RCA support team.

Channel Submenu



Boot Source

This setting allows you to select what input the TV uses when it is powered on. Default is Last, which starts the television back where it was when it was last powered off.

Boot Channel

This setting tunes to a specific channel when the TV is powered on. This requires 'Boot Source' to be set to TV

Tuner Lock

This setting locks the Channels submenu, making it unselectable. This stops outside interaction from changing your channels.

Direct Tune Access

This feature allows you select whether a channel can be directly tuned, even if it does not exist in your channel lineup. If you set this feature to 'On', you can type in a channel number that has no programming and the TV will still attempt to tune the channel

Commercial Interface Menu

OSD Submenu



Initial CC

This setting sets the closed caption setting of the television when it is powered on. Default is Last which starts from where the TV was when it was powered off.

Clear V chip Password

This clears the Vchip password incase a guest changed the default password.

Auto Reset Vchip

This setting allows you to automatically reset the Vchip password at set intervals. These intervals are: 4hr, 8hr, 12hr, and 24hr.

Signal Info. Bar

This setting allows you to view the Signal Strength bar in the Info menu from your master remote. Turning it on shows the signal information in the info section.

Clock Info. Bar

This setting allows you to view the clock in the info menu from your master remote. Turning it on shows the time in the info section.

Banner Style


This setting allows you to select the Basic or Full banner used when changing channels.

Basic shows the channel number and channel label, if set, when changing channels in the upper right corner of the screen.

The Full option shows the full information panel in its entirety when changing channels.

Commercial Interface Menu

Source Submenu

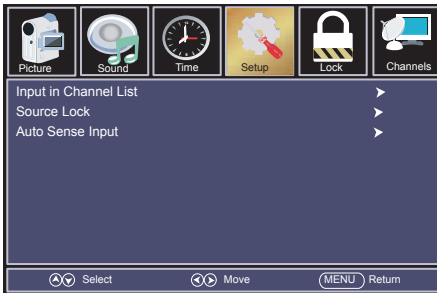

Input Channel List

This allows you to add Inputs into your channel lineup, adding them to the end. When you are on your last channel in the index, pressing CH+ on your remote will then proceed through the inputs you've selected. If you are on the first channel in the index, CH- will proceed through the inputs as well.

Source Lock

This allows you to add Inputs into your channel lineup, adding them to the end. When you are on your last channel in the index, pressing CH+ on your remote will then proceed through the inputs you've selected. If you are on the first channel in the index, CH- will proceed through the inputs as well.

Auto Sense Input

This feature allows you select inputs that automatically change the source of the television. When a device is detected being plugged in to an input that has been enabled for auto sense, the TV will automatically change to the input in question. To enable autosense, highlight the desired input and press either the left or right directional arrow and set the input to 'ON'.

Commercial Interface Menu

Volume Submenu



Speaker

This allows you to turn the speaker ON or OFF. Turning it off disables the built-in TV speakers.

Default Volume

This feature allows you to set the volume the TV will be set to when powered on.

Max Volume


This feature allows you to set the maximum volume a guest can use. The range is 0 – 100.

Min Volume

This feature allows you to set the minimum volume a guest can use. The range is 0 – 100.

Commercial Interface Menu

Power Management Submenu

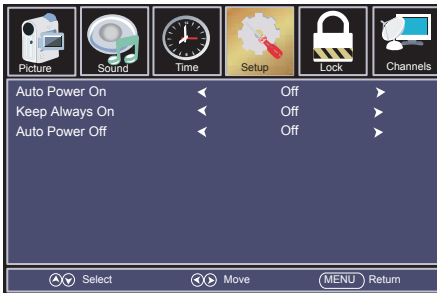

Auto Power On

This feature allows you to select how the TV acts after AC power is lost, and then restored.

- Off = TV powers OFF when AC power recovers.
- On = TV powers ON when AC power recovers.
- Last = When AC power recovers, the TV will go to the last power state it was in.

Keep Always On

This feature disables the ability to power off the television. However, If AC power is lost it will still power off.

Auto Power Off

This feature will automatically power off your TV if inactive for a set time. The time interval options are 4hr, 8hr, or 12hr

Commercial Interface Menu

Key Management Submenu



Keypad Lock

This feature disables all keys physically on the television except for the power button.

Power Keypad Lock

This feature disables the power button physically on the television.

Main Menu Lock


This feature adds a password lock to the main menu, even when using the master remote. This code is default: 0000

Active Remote Number

This feature allows multiple TV's to be in the same room, but having separate remotes control them. This allows you to select what remote number you can assign to the television. You can set this to 1 - 5.

Commercial Interface Menu

MUX Submenu

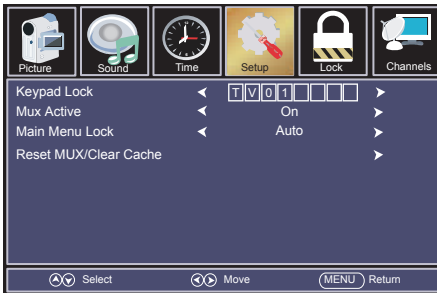

The RCA MUX is a device apparatus that is installed within your facility head-end. It gets injected between your signal provider and your buildings signal distribution. This device allows you setup all TV's, or some TV's, with a settings file. The TV searches for an updated setup file every time it is powered off. The power LED indicator flashes once this search and/or installation is completed. The options within this menu are used to administer this apparatus.

TV Name (Group)

This allows you to describe the TV name. If you're using multiple deployment setup files, this allows you to differentiate the television so it can be correctly utilized by the MUX. Default is 'TV01'. This must be set by hand if you wish to differentiate a television from the rest of the televisions on the property.

Mux Active

Sets the MUX feature on or off. Disabling will stop the television from searching for MUX update files.

Mux Channel

Default to AUTO. It allows you to manually select what physical channel to search for the MUX apparatuses broadcast. We suggest leaving the default setting.

Reset MUX/Clear Cache

This option clears the MUX cache so it will force the TV to recapture and install a MUX broadcasted setup file.

Channel Remapping

Remap Channel

This function allows the choice to decide how the television presents channel numbers. It allows the option to see and sort channels from the signal provider, the physical channel conventions referencing frequency location from the signal provider, or the ability to select RCA's indexing options unlocking the ability to manually change channels to a desired layout.



Virtual Number

This will have the television show and sort the Channel Numbers assigned by the signal provider. These numbers do not reference where the channel exists in correlation to frequency. This number is dynamic and can change whenever the signal provider desires.

Physical Number

This will have the television show and sort the Channel Numbers by EIA/NCTA channel numbers, which correlate to the frequency space the channel resides. This number is static and does not change.

Auto Index

This will automatically assign each channel a number and apply them sequentially. The channels will always be in sequence and cannot be spaced apart.

Example:

If there are 52 Channels - the channels will always be 1 through 52, starting at 1.

Manual Index

This will automatically assign each channel a number and apply them sequentially. This mode allows the channels to be assigned and changed however desired.

Example:

If there are 52 channels – the channels can be put anywhere. If channel 2 is desired to be channel 100, this can be done.

Channel Remapping

Channel Remapping

This menu shows all channel information found in a channel scan. It is where the television allows channels to be Remapped in any order, and where Channel Labels can be added.

Physical	Virtual	Index	Channel Labels	Skip
----------	---------	-------	----------------	------

There are 5 columns, each showing specific information. Below outlines this information:

Column 1: Physical

This column shows the channel number that references the frequency location of the channel. This number is controlled by the signal provider and cannot be changed. This column is best used as a guide when remapping as it is a static number that does not change. Most signal providers can give this information upon request.

Column 2: Virtual

This column shows the channel number a signal provider assigns to the channel, masking the physical number with a new number. This number is controlled by the signal provider and is dynamic and the signal provider can alter it at any time. Most signal providers can give this information upon request to help guide in channel remapping.

Column 3: Index

This column shows the channel number that the television assigns to the channel when using the Auto Index or Manual Index functions. This is the number that will be manipulated and edited to remap a channel.

Column 4: Channel Labels

This column shows the Channel Labels of the channel. Some signal providers transmit this information with their channels. If this is the case, this will show here. A channel label can also be manually input or edited in this column.

Column 5: Skip

This column shows whether a channel is skipped. The text 'Skip' will be listed if the channel is skipped. A skipped channel will not tune when using CH+ or CH- on a remote.

At the bottom of this menu, there are 5 options available. These options are how channel mapping and channel labels can be edited.

| 1: Rename | 2: Index Edit | 3: Skip | 4: Auto Sort | Page: 1/4

Channel Remapping

Renaming

Highlighting a channel and pressing 1 on a master remote will bring up 7 editable boxes in the channel label column. Use the left/right directional arrows to navigate between the boxes and the up/down arrows to edit the boxes text. Press 'OK' on a master remote when finished entering the label.



Index Edit

Highlighting a channel and pressing 2 on a master remote will bring up an Index Edit prompt. To edit the channel, type in the new desired channel using the number pad on a master remote.



In the above example, channel 1 was selected. Using the number pad on a master remote, type in the new desired channel number and press 'OK' to lock in the change.

Note: The new assignment will swap the with the old channel assignment. So, if Channel 1 is set to Channel 5, then the original Channel 5 will become the new Channel 1.

Skip

Highlighting a channel and pressing 3 on a master remote will skip it. This stops the television from tuning this channel when using CH+ or CH- on a remote. However, the skipped channel can still be tuned by direct input on the remote.

Auto Sort

This feature is only available when the television is set to either Virtual Number or Physical Number in the Setup Submenu. Pressing 4 on a master remote will sort the channel lineup based upon either the assigned Virtual Number or Physical Number, placing the channel lineup in sequential order using the signal providers assigned Virtual or Physical numbers.

Notes: When highlighting a channel and pressing 'OK' on a master remote, the channel that is highlighted will tune behind the menu. This can be useful when trying to identify an unlabeled channel.

USB Operation

Note: Before operating Media menu, Plug in USB device, then press INPUT button to set the Input Source to Media.

Press ◀/▶ button to select Media in the Source menu, then press OK button to enter.

Press ◀/▶ button to adjust the option you want to adjust in the main Media menu, then press OK button to enter.


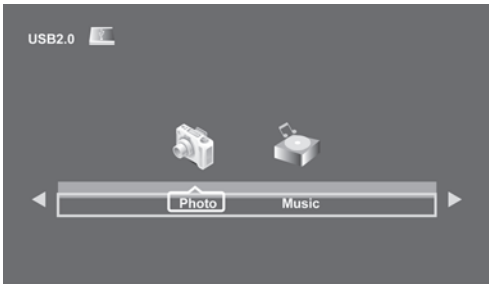


Photo Menu

Press ◀/▶ button to select PHOTO in the main menu, then press OK button to enter.

Press clear button to return to the previous menu.

Press ◀/▶ button to select drive disk you want to watch, then press OK button to enter.

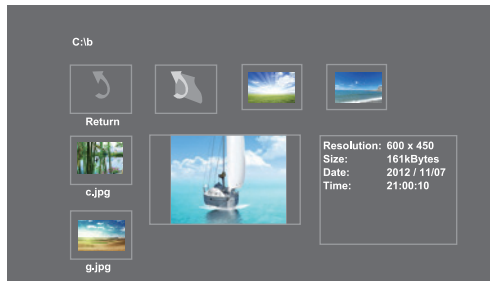

Press ◀/▶ button to select the file you want to watch in the file selecting menu, then press OK button to display picture.




USB Operation

Music Menu

Press ◀ / ▶ button to select MUSIC in the main menu, then press OK button to enter.


Press clear button to return to the previous menu.

Press ◀ / ▶ button to select drive disk you want to watch, then press OK button to enter.

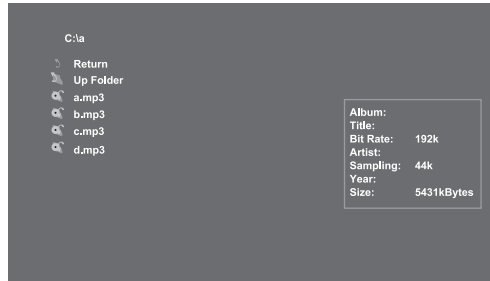

Press ◀ / ▶ button to select the file you want to watch in the file selecting menu, then press OK button to add the file to play list, use on screen menu to control playback of media.

When highlighting the option you select, the file information will appear on the right.

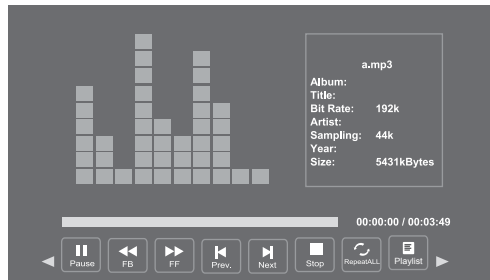

Press ◀ / ▶ button to select menu in the bottom you want to run, then press OK button to operate.

Press clear button to return to the previous menu.

Troubleshooting

Carry out the problem-solving measures described in the following section before contacting Customer Support.

Turn off the device immediately as soon as you suspect a malfunction and unplug the power plug.

Do not attempt to repair the device yourself.


SYMPTOM	CHECK ITEM
LED screen stays dark.	Make sure the unit is turned on and the connections are correct.
There is no sound.	Make sure the system connections are correct. Make sure the speakers are turned on.
There is no picture or picture move up and down unsteady.	Ensure the connections on the external AV signal source are correct. Correctly set the items in the picture menu. Make sure the unit is turned on and the correct input is selected.
The remote control does not work.	Make sure there no obstructions between the remote control and the unit. Make sure the remote control is pointing at the unit. Make sure the batteries are inserted or the polarity is correct. Replace the batteries to ensure the batteries are not weak. Ensure the preamble on the remote matches the TV setting (See Remote Active No. section of this manual for details.)

Other Notes:

Static or other external interfere may cause this device to behave abnormally. If this occurs, unplug the power-supply cord from the outlet and plug it in again to reset the device.

If the problems persist, then please disconnect the power and consult the manufacturer.

Attaching the TV Stand

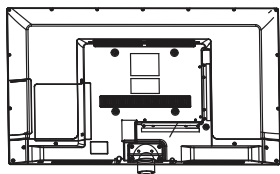


Step One

Place the TV faced down on a soft cloth or cushion to prevent the panel from being damaged

The panel can be scratched easily, so please:

1. Choose an absolutely flat surface to place the TV on.
2. Use soft cloth or cushion to face the TV panel,
Do not put TV on the table directly.

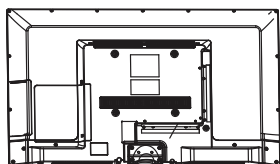



Step Two

Place the smaller round plastic ring on the TV neck, then place the stand.




Step three

Place another round plastic ring with a notch, then place the circular metal plate on the stand.

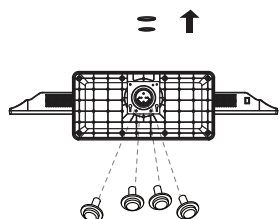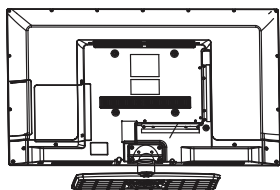

Step four

Insert and tighten all screws.

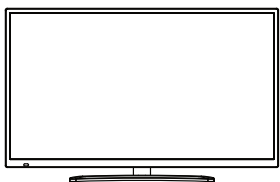

Then the TV is ready for use now.


Attaching the TV Stand to Furniture

Locking Plate


The RCA LV series TV is equipped with an integrated locking plate to deter unauthorized movement of the TV.

Typical Fasteners


- A) #8 Tamper Resistant
- B) #10 Philips Pan Head
- C) Tamper Resistant Drive Bit

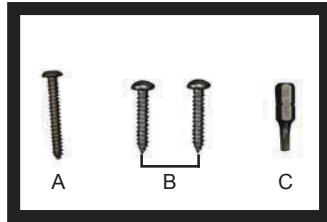

Fasteners

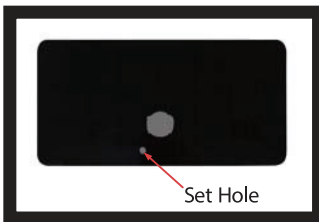


Top View

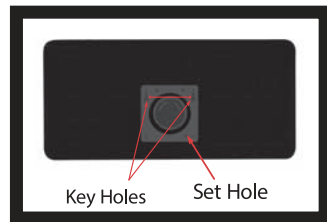

Bottom View

Instructions

- 1) Drive Two (2) #10 Philips Pan-Head screws of sufficient length into your mounting surface at exactly 6 - 11/16" (17mm) apart.
- 2) Leave 1/8" gap between surface and bottom of screw head.
- 3) Place the TV Base over the screws allowing the heads to go through the large part of the keyhole opening
- 4) Press down slightly and push the base back to engage keyhole lock
- 5) With the proper sized bit, Drive #8 Tamper resistant screw through the set hole into the mounting surface.

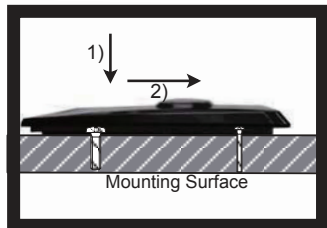

Side View

Limited Warranty

Limited Warranty

Your Display will be repaired or replaced in accordance with the terms of this warranty, if it proves to be defective in material or workmanship under normal use, during the warranty period ("Warranty Period") listed below, effective from the date ("Date of Purchase") of original consumer purchase of the product. This warranty is good only to the original purchaser of the product and effective only when used in the United States, excluding U.S. Territories.

WARRANTY PERIOD

Labor and parts:

1 year from the Date of Purchase. Your unit will be repaired or replaced with a new, substitute model or factory reconditioned unit. If repaired, parts used in the repair may be new or remanufactured.

Replacement Units and Repair Parts are warranted for the remaining portion of the original unit's warranty period.

Effective date of warranty:

Your warranty period begins on the date of sale to the original consumer/end user. KEEP THE DEALER'S DATED BILL OF SALE OR PROOF OF DELIVERY as evidence of the purchase date.

You will be required to submit a legible copy of your bill of sale or proof of delivery when requesting warranty service.

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS U.S. DISTRIBUTOR SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE, INCLUDING WITHOUT LIMITATION, LOST PROFITS, LOST OR CORRUPTED PROGRAMMING OR DATA, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

Concerning Pixel Functionality:

Your display contains about one million individual pixels.

Your display typically contains a small number of pixels that do not function normally. Your display has been inspected and is in compliance with manufacturer's specifications, indicating that any pixel defects do not affect the operation or use of your display.

Limited Warranty

THIS LIMITED WARRANTY DOES NOT APPLY TO:

- Damage caused in shipping or transit
- Service required as a result of improper installation, including incorrect or insufficient AC supply (please consult the owner's manual for power-supply requirements).
- Installation or repair of antenna systems, cable converters, cable company supplied equipment, or other components in a video system
- Set-up or adjustment on consumer controls, or damage caused by improper adjustments
- Damage caused by other system components
- Any panel that has been modified or incorporated into any other product
- Replacement of batteries on the remote control.
- Damage (including cosmetic damage), failure, loss or personal injury due to misuse, abuse, negligence, improper maintenance or storage, or to acts of nature or other causes beyond our control. (Causes beyond our control include but are not limited to lightning strike, power surges, power outages and water damage.)
- Image burn-in
- Repair or replacement of warranted parts by anyone other than an authorized service centers.
- Units purchased or serviced outside of the coverage area.
- Product where the original factory serial numbers have been removed, defaced or changed in any way.
- Product sold and labeled as "as is, where is" or similar disclaimer.

How you get service:

Contact your dealer, or visit <http://www.rcacommercialtv.com>, or call 1-800-RCA-2161 (800-722-2161).

Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

To contact the RCA Commercial warranty center by

E-mail: support@rcacommercialtv.com

Product Registration:

Please register online at <http://www.rcacommercialtv.com>. It will make it easier to contact you should it ever be necessary.

RCA is a trademark of RCA Trademark Management used under license of DTI.
DTI Services, LLC
5935 W 84th St
Indianapolis, IN 46278
<http://www.rcacommercialtv.com>

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages